

Figure 1 – Site Location

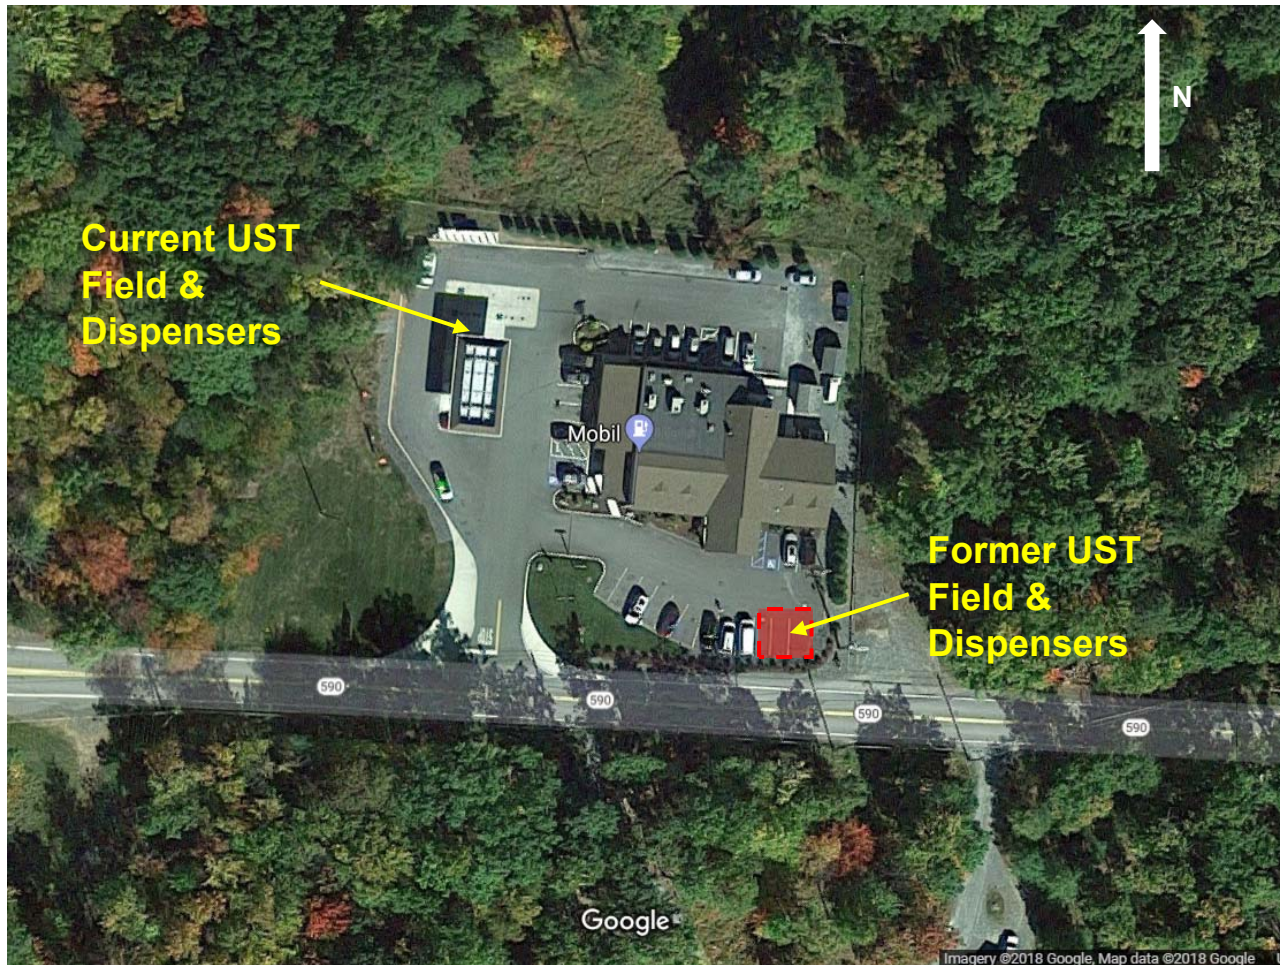


Figure 2 - 2011 Soil Boring Locations

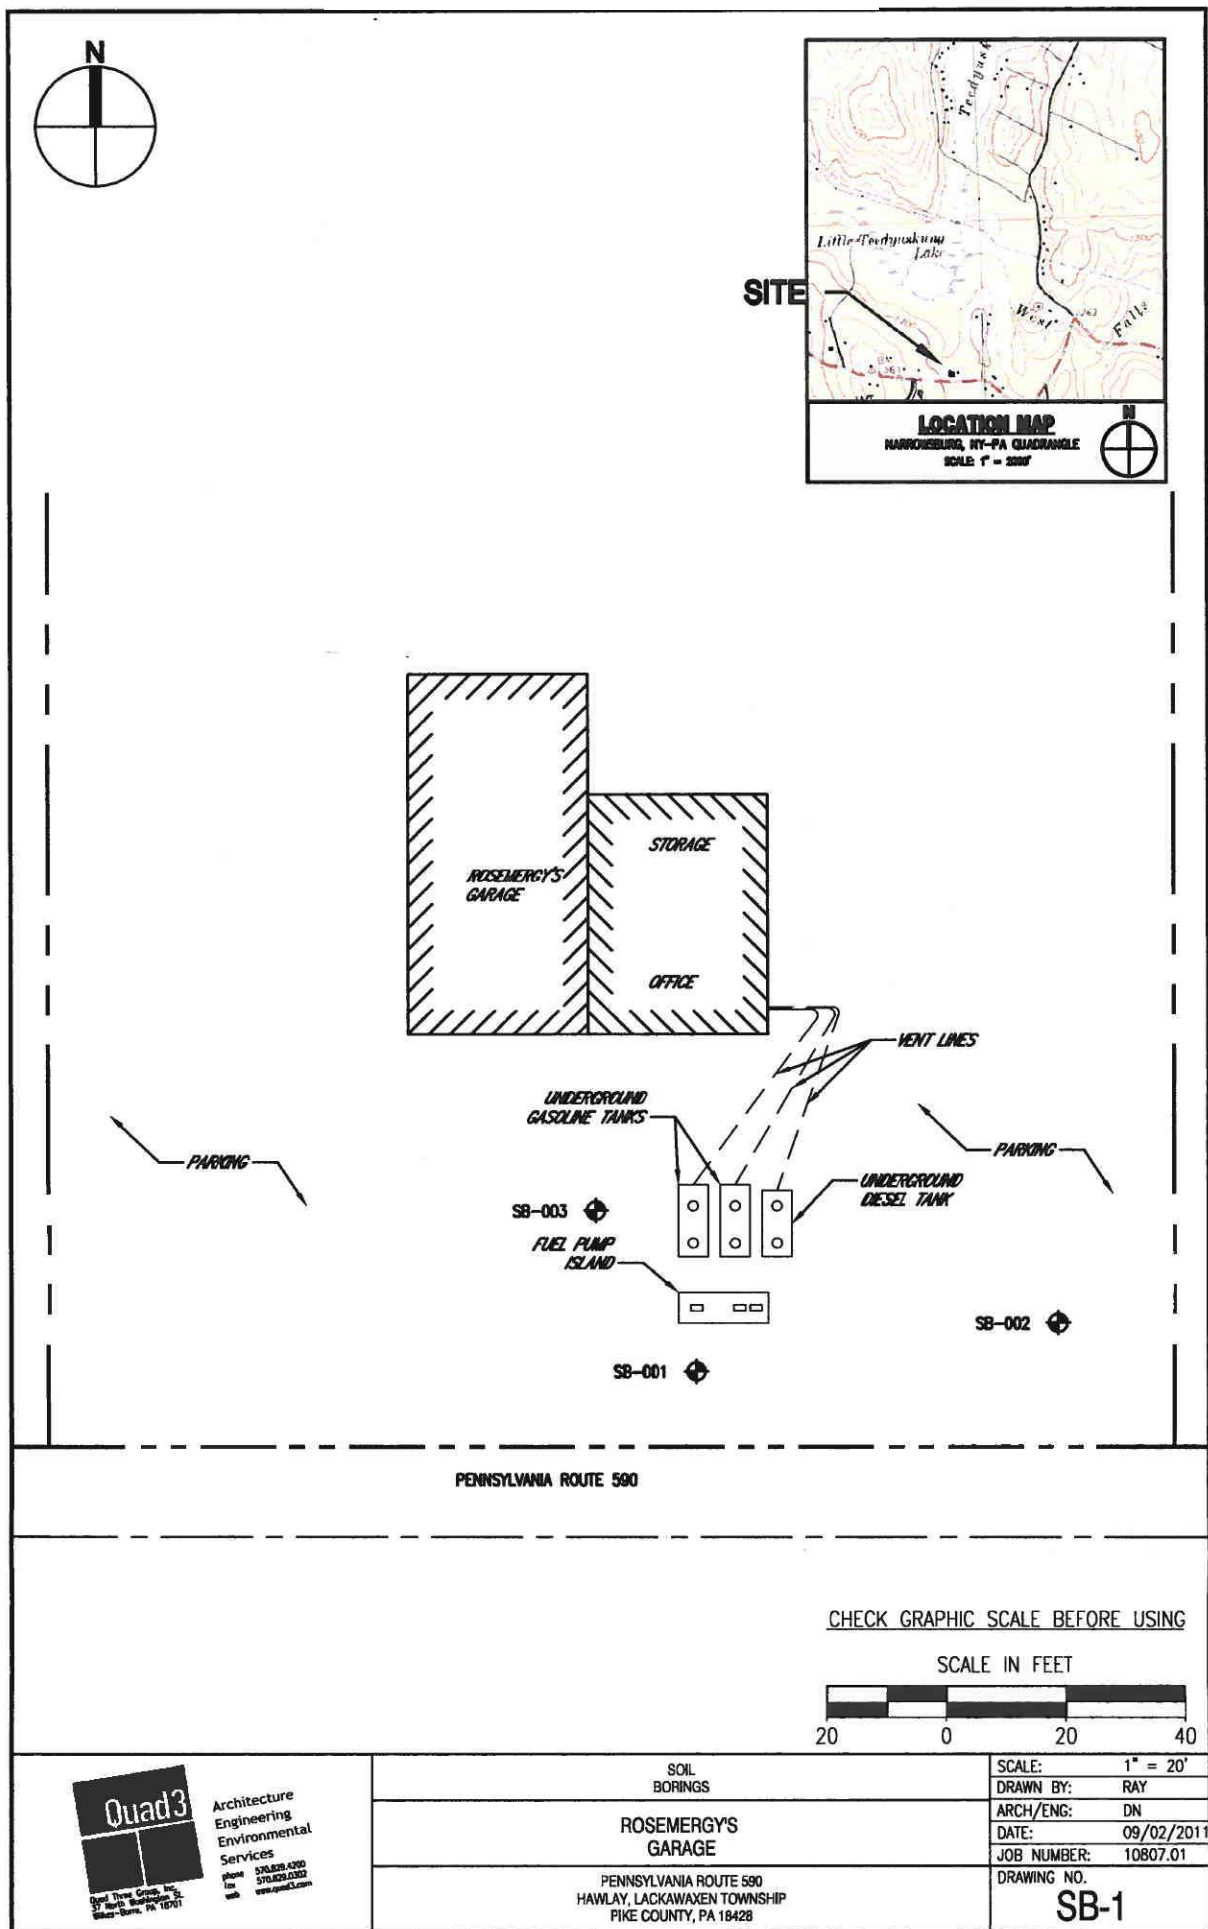


Figure 3 - 2012 Soil Boring Locations

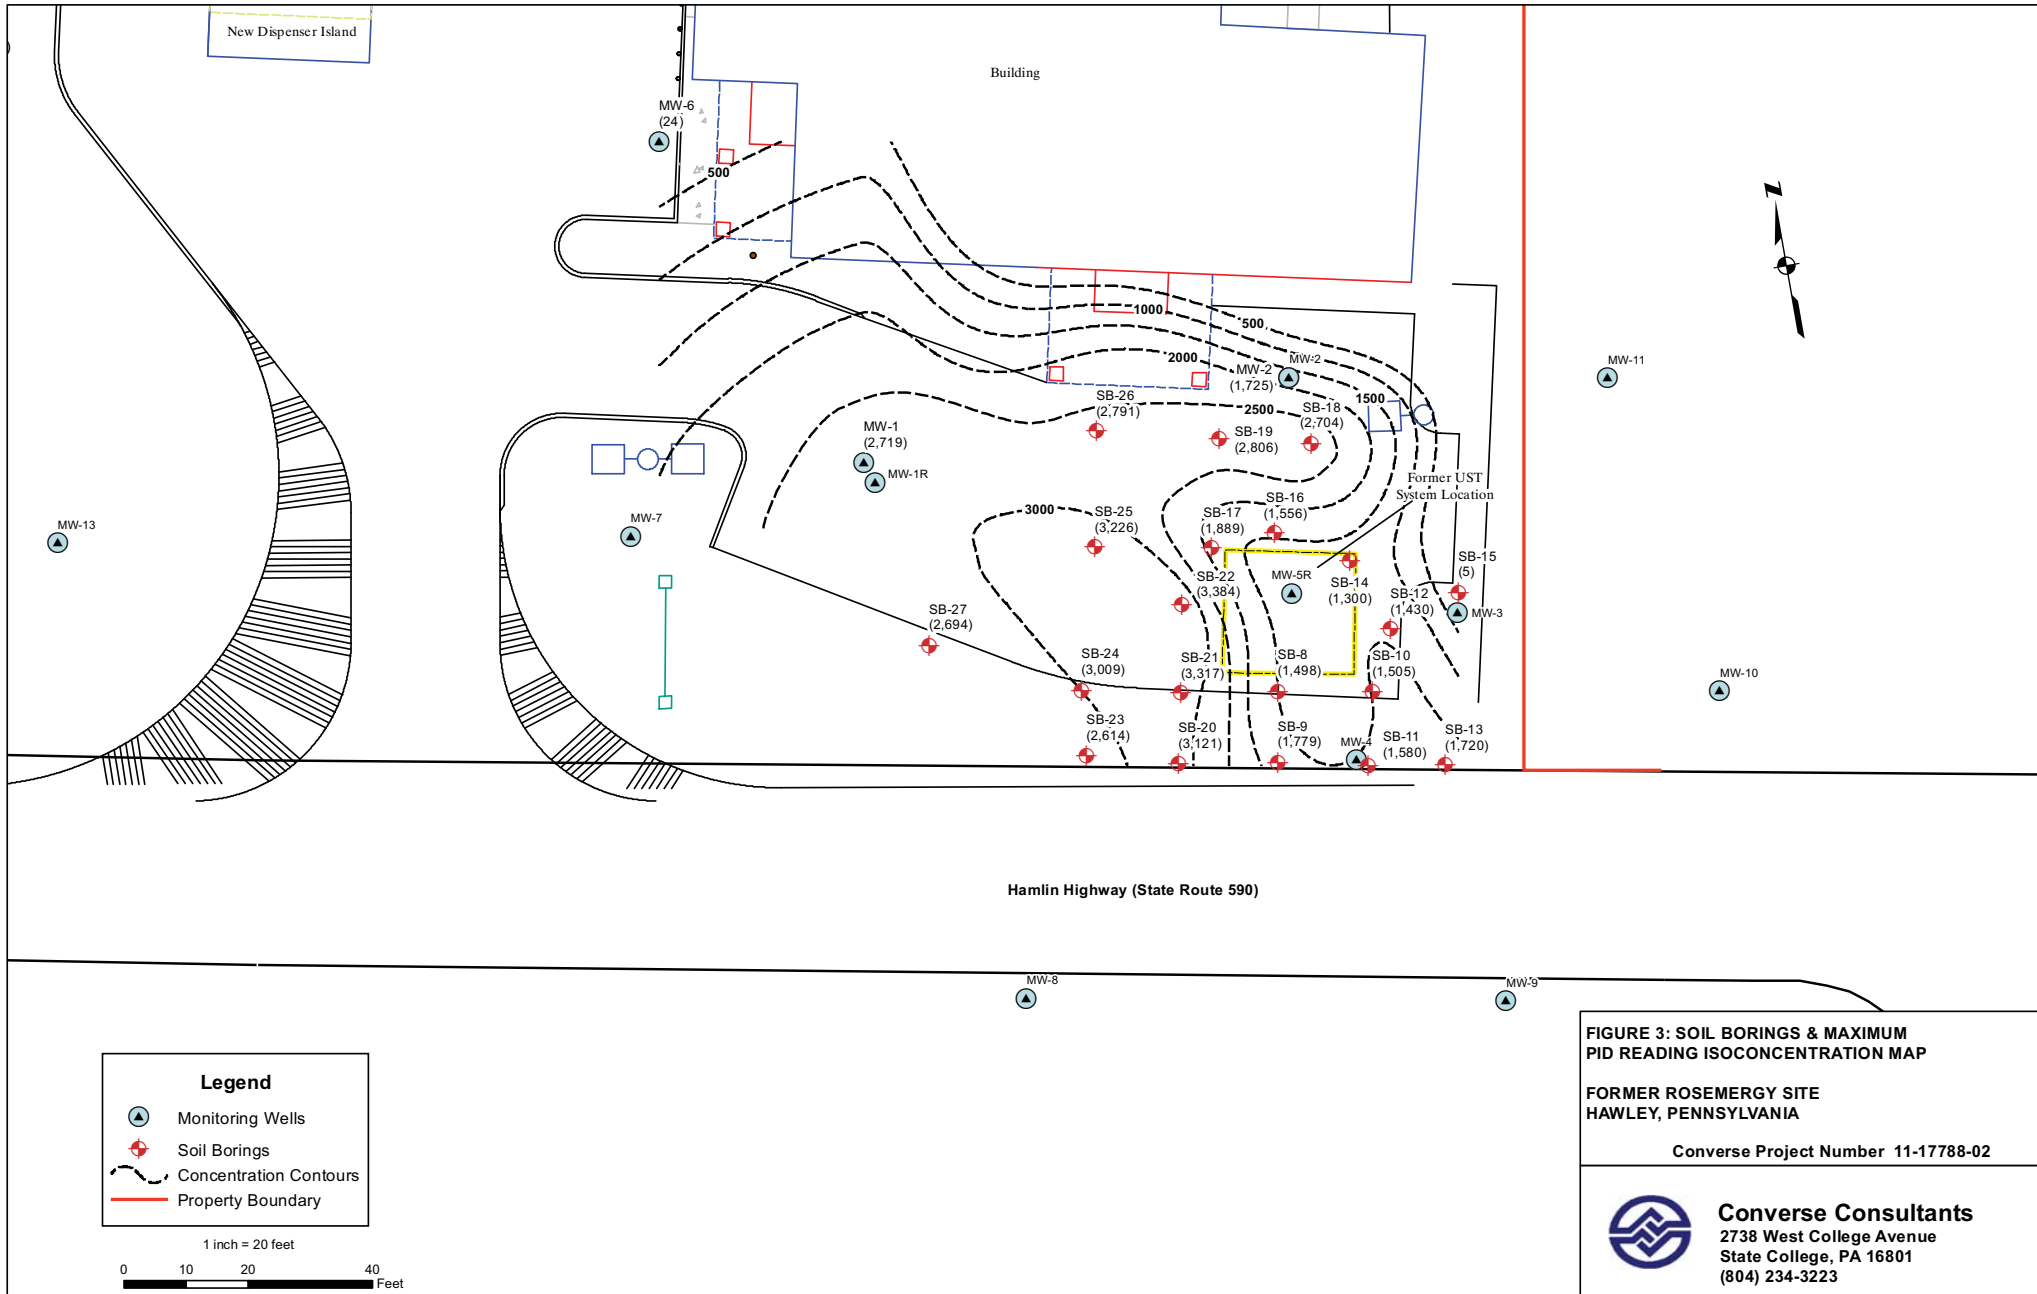
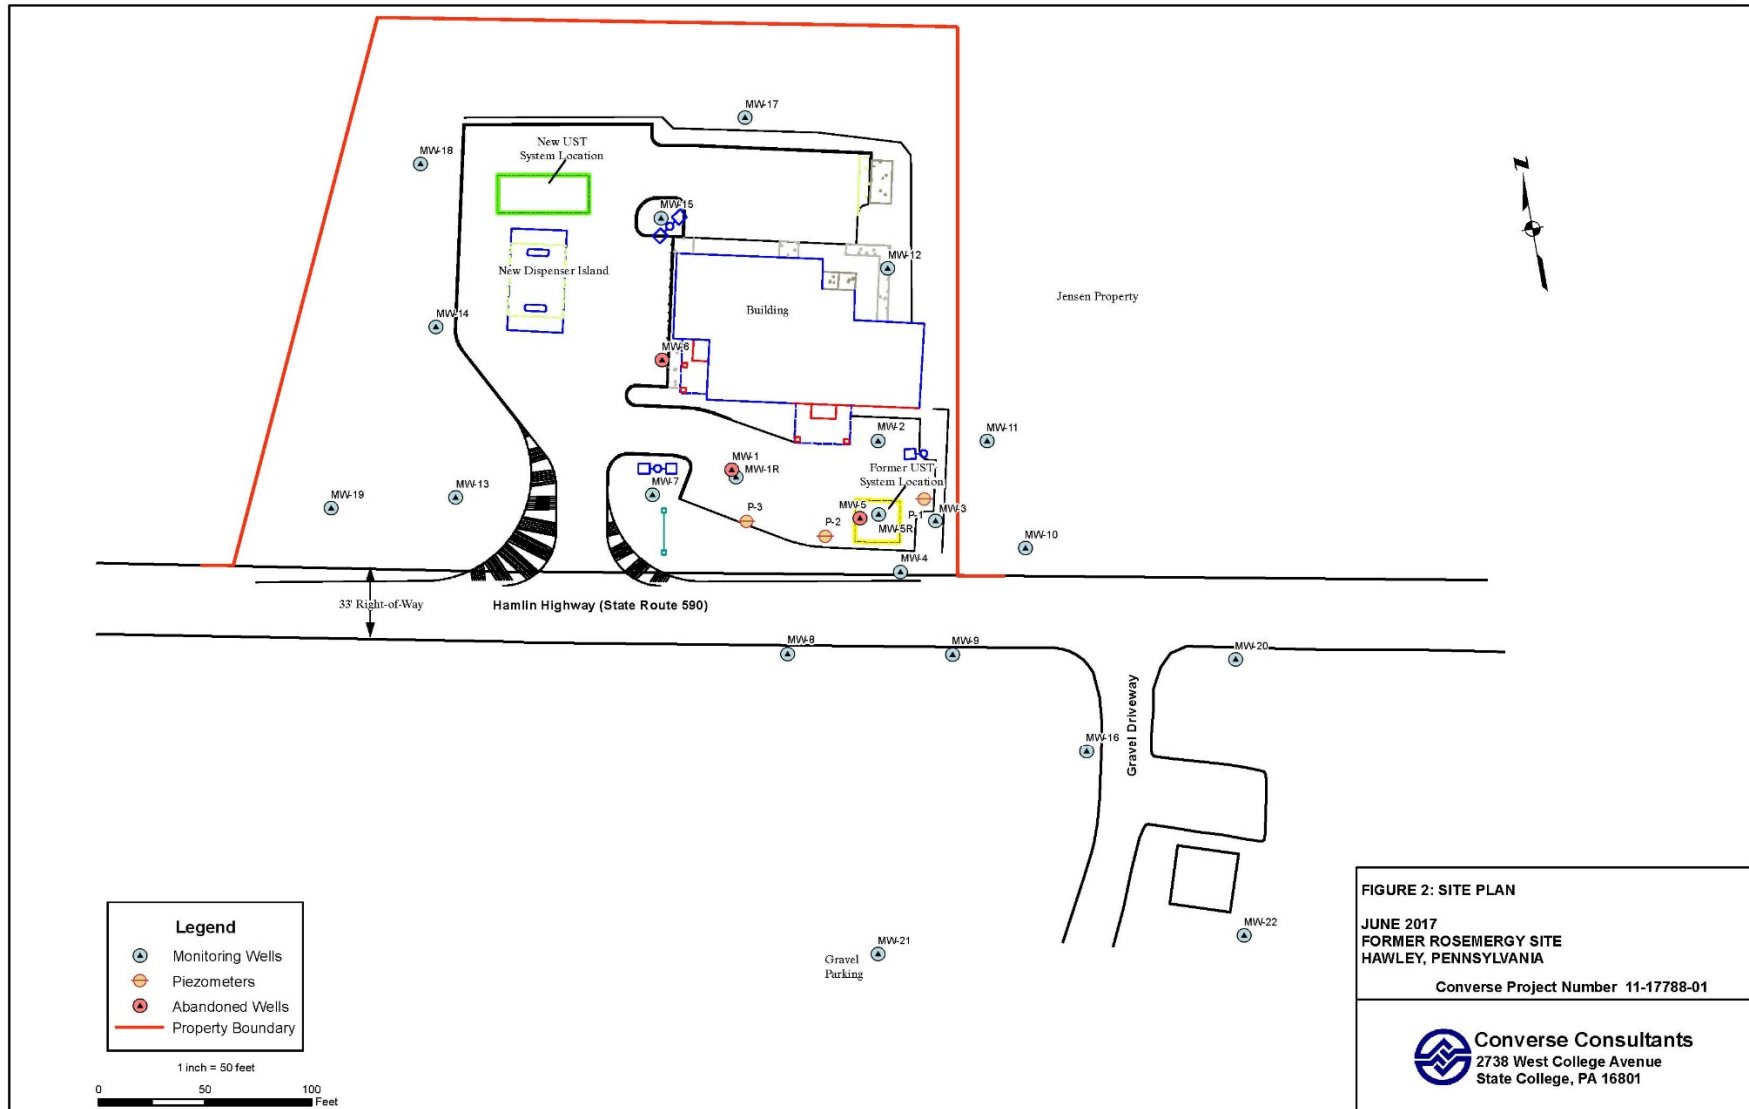


Figure 4 – Monitoring Well Locations



**Figure 5 – Benzene Distribution in Smear Zone Soil
(maximum concentration relative to SHS)**



Figure 6 – DPE Well Locations & Remedial System Layout

